


16430 Stage-Top Incubator, closed, for MCL NanoZ500 / Nikon Ti Piezo Stage

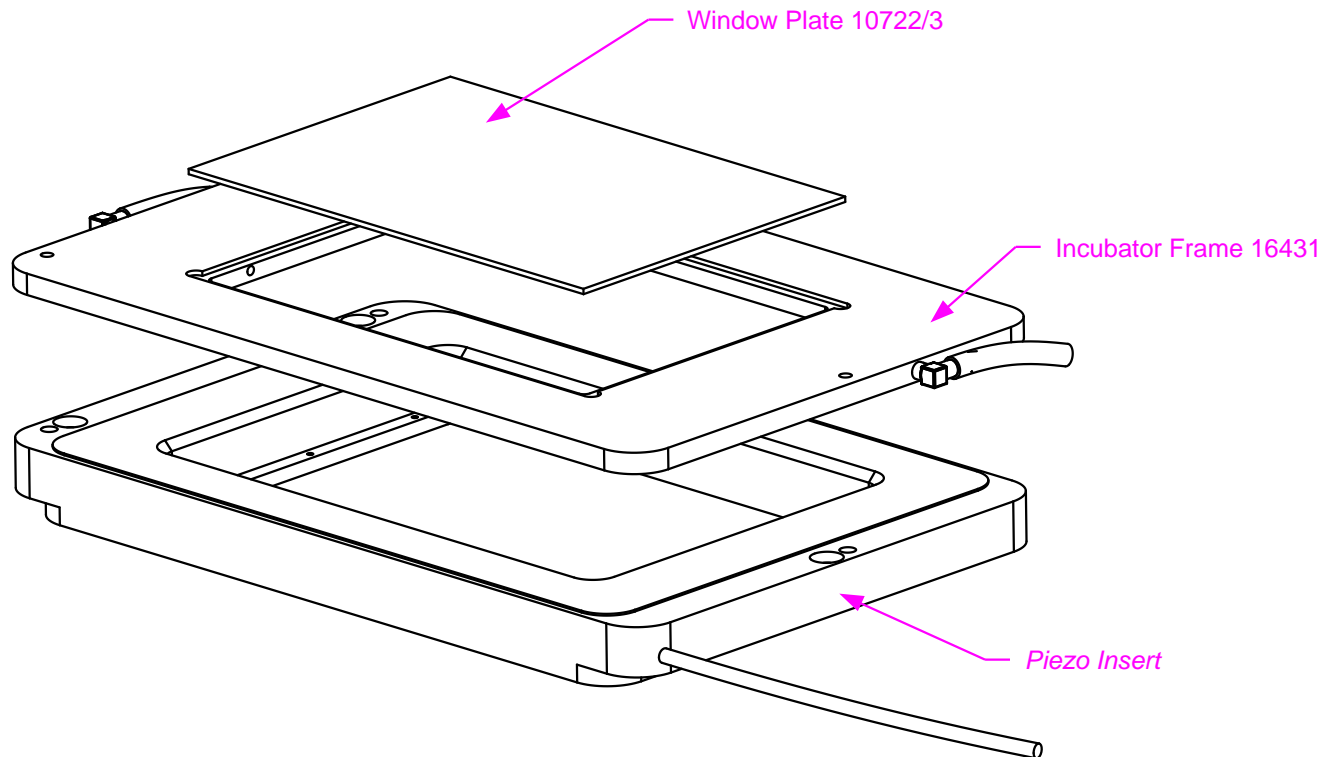

Insert a window plate into the the incubator frame 16431. Use the glass window plate 10723 if you plan to use contrast modes that require a polarization-maintaining material (e.g. interference contrast). Use the unbreakable polycarbonate window plate 10722 otherwise.

Connect the inlets of the incubator frame to the outlet of the humidifier column using flexible tubing, the Y-connector, and the quick-lock connector supplied. Keep the tubing to the minimum length required for the travel range of the stage.

Place the incubator on the specimen piezo insert as shown.